

PRODUKTUNTERLAGEN

Palermo Aroma-Diffuser mit Farbwechsel und Timer

Artikel: AATOM-18

Bedienungsanleitung

Im Anhang findest du die vom Lieferanten für diesen Artikel bereitgestellte Bedienungsanleitung in englischer Sprache. Die nachstehenden deutschen Hinweise fassen ausgewählte Angaben zusammen und ersetzen nicht die vollständige Anleitung. Beachte auch das Typenschild und die dem Gerät beiliegende Anleitung.

Tankvolumen laut Anleitung: 120 ml; USB-Stromversorgung: DC 5 V / 800 mA.

Gerät waagrecht aufstellen. Nicht über MAX füllen und nicht ohne Wasser betreiben. Die Anleitung nennt 2 bis 3 Tropfen ätherisches Öl (0,1 bis 0,2 ml).

Beim Entleeren den Lufteinlass nach oben halten. Kein Wasser in die Elektronik gelangen lassen. Die Ultraschallplatte nicht mit den Händen berühren.

Vor Pflege und Reinigung die Stromversorgung trennen. Nach 5 bis 6 Anwendungen reinigen; vor längerer Lagerung vollständig leeren und trocknen.

Die Originaldokumente folgen vollständig und unverändert. Aussteller, Hersteller- und Kontaktangaben sind im jeweiligen Original wiedergegeben. Scent Society tritt durch die Gestaltung dieser Zusammenstellung nicht als Hersteller auf.

Fehlende aktuelle deutsche Kennzeichnungsunterlagen sowie die vollständige produktbezogene Herstellerzuordnung wurden beim Lieferanten zur Bestätigung angefragt.

Scent Society ist ein Angebot von ForgeLab:45. Fragen zu diesem Artikel: info@scent-society.de.

Thank you for purchasing our products. please read this manual carefully before using. It may bring you more safe and comfortable experience.

Operation instructions

Follow these steps for a quick start with the aroma diffuser.

1. Remove the cover: Open the outer coverage firstly, then inner cover. If there is water in the tank, please do keep the main body vertically when open or close the cover.
2. Add water: Please keep the water below MAX level when you fill in water.
3. Add essential oil: Drop the essential oil into the tank, and at most 2-3 drops (about 0.1-0.2ml).
4. Install cover: Put the lid on and then the cover, installation finished. Never tilt the main body during these steps, to avoid of the accident caused by water leakage inside inhaled by air to the mechanic part of machine.
- 5 Connect the USB cable: Insert the USB cable into the DC socket on the base and place the diffuser horizontally.
- 6.Connect the power: Plug the USB cable into the power adapter, or connect to computer or power bank. The power supply must be over 5V 800mA.

⑦Press the button ✱ for the first time to turn on the light, the color of the light will automatically switch slowly; if you press the button ✱ for the second time, the color will be fixed. continue to press the button, switch to next color,until close the light;

⑧Press button ☺ one time, the spray will be emitted continuously, Press button ☺ two times, the spray will stop.

⑨Press the button ☹first time, it will keep spraying. If you press second time,it will spray for 1 hour, to press the third time, the spray time will be 3 hours. Press the fourth time ,it will spray for 6 hours,the fifth time enter time setting function.

✱ ✱: Light, ☺: Power, ☹:Timing

✱The volume of spray varies depending on the indoor environment and the amount of water in the tank.

✱Affected by external factors such as temperature and water quality, the volume of spray is few when the power is just on. it can stay stable after a few minutes.

✱It is normal ,it seems no spray due to temperature, temperature, airflow, etc.

✱This device has anti-dry function: when the water level is too low or there is no water in the tank, it will be automatically shut down, even if the power is on, it will be cut off automatically.

Precautions

- Do not disassemble the device while it is running, otherwise water will squirt out.
- It is recommended to use pure water, mineral water, purified water, etc., and do not use unidentified liquid or high concentration liquid to avoid malfunction.
- The water in the tank should not exceed the maximum limit level, otherwise it will not spray properly,nor spray out.
- Do not tilt the diffuser body when there is the water inside.To avoid inner water leakage inhaled by the air port to conflict with inside body. which will lead to diffuser damage or malfunction.
- Do not touch the atomized sheet inside the water tank with your hands directly.
- When draining, make sure that the air supply port is facing upwards to prevent the water from infiltrating through the air supply port and causing malfunction.

- When using the device under low temperature or heavy humidity, Condensation phenomenon will take place when spraying. Water droplets are condensed on the outer case of the machine. It is normal,please wipe it off with a towel.

- Regularly use a soft cloth to clean the inside of the tank. If the atomized sheet is dirty, it may cause malfunction. It is recommended to clean it every 5-6 times usage.

- When performing maintenance, please do remember to unplug the power adapter from the socket and the power is off.

- If the diffuser will be not used for a long time, please empty the water in the tank and clean it. Keep it safely after dry it completely.

Simple troubleshooting

When the diffuser is not working, please confirm the following items before sending it to repair:

1. The power supply can not be put on: Check if the power supply is properly connected, and confirm the connection status between the power adapter and the socket of the diffuser. Just in case, remove the DC plug from the socket and insert it again, then confirm the connection status.

2. Disconnect after the power is turned on: When the diffuser tank is empty, it will automatically stop after pressing spray button. Please confirm whether there is water in the tank or if there is insufficient water. Please fill water in the tank.

3. no fog-spray or fog-spray is poor :

- 1) Check if the atomized sheet is dirty;

- 2) Check if the water volume in the tank is insufficient or exceeds the MAX level. When it exceeds, the spray can not be performed properly, please empty or fill in water until it can spray properly.

- 3) Confirm that the main body case and the inner case are properly installed and firmly mounted. If the main body case and the inner case installed wrong, the generated spray can not reach the outlet normally;

- 4) Check if the bottom suction port is dirty, which will decrease the airflow and cause spray problem.

- 5) Due to air temperature, water temperature, etc., and the surroundings, it is difficult to see the spray, nor the spray can be clearly seen. but the fan is in normal operation (the sound of motor can be heard), there is no fault.

4. Water leakage:

- 1) Confirm that the outer case is properly installed, confirm that the inner case is not shift or falling off, and main body both cases firmly fixed and properly installed.

- 2) When the main body case and the inner case shift, the spray cannot reach the outlet, lead to condensation phenomenon.

- 3) Confirm whether the temperature is too low or too high. In the state of low temperature or heavy humidity, the condensation may occur in the spray.

Product Specifications

【Product Name】 Aroma Diffuser

【Voltage】 DC 5V ≥800Ma

【Power】 4-5W

【Tank volume】 120ml

【Cable Length】 1m

【Timing】 Continuous operation / timed

【Applicable indoor area】 About 10-13 m²