

PRODUKTUNTERLAGEN

Gerippter Aroma-Diffuser mit Farbwechsel

Artikel: AATOM-43

Bedienungsanleitung

Im Anhang findest du die vom Lieferanten für diesen Artikel bereitgestellte Bedienungsanleitung in englischer Sprache. Die nachstehenden deutschen Hinweise fassen ausgewählte Angaben zusammen und ersetzen nicht die vollständige Anleitung. Beachte auch das Typenschild und die dem Gerät beiliegende Anleitung.

Tankvolumen laut Anleitung: 400 ml; Geräteversorgung: DC 24 V / 500 mA, Netzadapter-Eingang: AC 100 bis 240 V, 50/60 Hz.

Mit einem separaten Gefäß befüllen, nicht direkt unter dem Wasserhahn. MAX nicht überschreiten. Die Anleitung nennt 2 bis 3 Tropfen Öl je 100 ml Wasser.


Nebel nicht direkt auf Möbel, Kleidung oder Wände richten. Öl kann Flecken verursachen; Spritzer mit einem sauberen Tuch entfernen.

Vor Wartung und Reinigung den Netzstecker ziehen. Nach 3 bis 5 Tagen bzw. 5 bis 6 Anwendungen reinigen. Keine Säuren oder Enzymreiniger verwenden. Vor längerer Lagerung leeren und trocknen.

Die Originaldokumente folgen vollständig und unverändert. Aussteller, Hersteller- und Kontaktangaben sind im jeweiligen Original wiedergegeben. Scent Society tritt durch die Gestaltung dieser Zusammenstellung nicht als Hersteller auf.

Fehlende aktuelle deutsche Kennzeichnungsunterlagen sowie die vollständige produktbezogene Herstellerzuordnung wurden beim Lieferanten zur Bestätigung angefragt.

Scent Society ist ein Angebot von ForgeLab:45. Fragen zu diesem Artikel: info@scent-society.de.

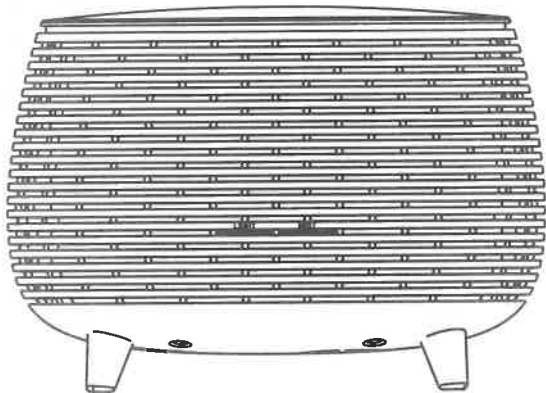

INSTRUCTION MANUAL

SPECIFICATION

Product size: 20 x 13.5 x 14.3cm

Input/Output: AC100-240V

Frequency: 50/60hz

Voltage: DC24V 500mA

Power: 6.5W

Time Mode: 1H/3H/6H ON

Tank Capacity: 400ml

LED Light: 7 bulbs

Material: ABS+PP

Accessories: AC adaptor, remote control and manual

Method of mist production: 2.4Mhz


OPERATION



- ① Connect the DC port to the DC slot of the base.



- ② Take off the cover.

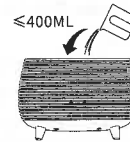

- ③ Add water into the tank, don't exceed the max 400ML.



- ④ Add some essential oils into the water(2-3 drops per 100ML)



- ⑤ Re-install the cover.



- ⑥ Connect the AC adaptor to the power socket.

⑦ MIST:

First press, the unit enters into continuous mist mode.

Second press, the unit enters into intermittent mist mode.(work 30s, stop 30s, recycle)

Third press, turn off the unit.(Long press 2s can turn off the unit at any mode.)



⑧ LIGHT:

First press, turn on the light and there are 7 colors changing automatically.

Second press, pause on current color.

Third press, changing the light color, press again, the current light become darker.

When the unit is turned off, the lights will be turned on alone after pressed the LIGHT button.


MAINTENANCE

After using 3-5 days or 5-6 times, Please clean the product as follow:

- Unplug the unit from power supply and remove cover.
- Pour out any remaining water from the tank.
- Add small amount of Kitchen detergent / mild detergent with water.
- Leave for 5 minutes and drain the solution.
- Wipe with soft cloth. Avoid ultrasonic vibration plate area, which can be gently cleaned with a cotton buds.

Note: Never use other acids, enzymes or detergent, as it may risk poisonous gas to be created or cause malfunction

PRODUCT DESCRIPTION

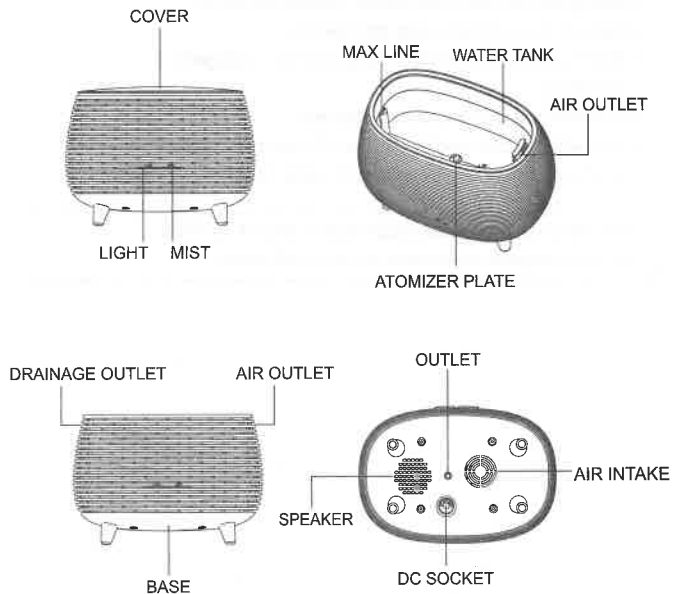


REMINDERS

- Please use other container to add water. Don't fill in the tank from water-tap directly.
- Pure essential oils or oils which can be soluble into water are available for use. Please clean the unit as per the maintenance instructions before changing a new type of essential oil.
- It is quite normal that different humidity environment and temperature will affect the mist density.
- Do not let the mist spray to the furniture, clothes, wall directly.
- The essential oils may cause dye. Please use clean cloth wipe up if splashed out accidentally.
- To ensure the sanitation, please pour out the water completely and wipe up the unit with soft cloth after each use.
- If you don't use the unit for a long time, please pour out any remaining water completely in the tank and store it at dry place.
- When the power connects, the unit original state is OFF.
- If there is short of water in the tank, even though the power connects, the unit will shut automatically. Meanwhile, all function will be off.

TROUBLESHOOTING

SYMPTOM	POSSIBLE CAUSE	SOLUTION
Power On is not working	• Not enough water in the tank • Power cord not connected properly	• Add water to the tank • Disconnect, check cables and re-connect carefully.
No mist or abnormal mist	• Not enough water • Too much water • Dirt on the ultrasonic plate • Cover and inner cover are not installed properly • Dirt in the air suction	• Add a suitable amount of water in the tank • Water must never be filled over 400ml (MAX) line. • Remove and reinstall correctly. • Clean the air suction part of any dust.
Water leakage from product	• Cover is not installed properly • Unit has been tipped over • Low temperature of high humidity	• Remove and reinstall correctly, so vapors can be released freely. • Under these conditions, the mist may condense quickly into water droplets.

REMOTE CONTROL INSTRUCTION

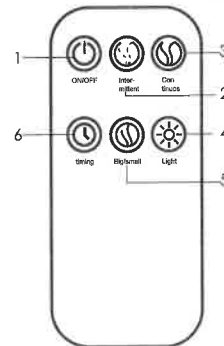

1	ON/OFF	POWER SWITCH
2	INTERMITTENT	10 Seconds interval mist
3	CONTINUOUS	Continuous Mist
4	LIGHT	Press LIGHT button once to turn on the color changing light. Press again to select your desired fixed color on level 2 brightness. Press again to choose other colors on Level 1 or Level 2 brightness.
5	BIG/SMALL	Heavy / Light Mist
6	TIMER	1hr/ 3hr / 6hr timer